 


SMS notification

Can send SMS or email on start or end of alarm state.

User configuration



In top menu **Tools** select option **Options**

In new window go to SMS tab. **Warning! Changes can be saved only when you are logged in!**

Options

us Nastavenie spojenia Zoznam užívateľov Zvuk Prevádzkové poznámky Meranie SMS Tooltip Plyn Scada Editor Alarmovanie Výkon Trendy

Meno a priezvisko: Jožko Ferko
 Telefónne číslo: 0909999999
 Email: arsi@chello.sk
 Zapnúť generovanie: ☒ Generovať ukončenie alarmu: ☐
 Totožný novovzniknutý alarm, neposielat: 1 hod. 0 min. od predošlého odoslaného

Pondelok Utorok Streda Štvrtok Piatok Sobota Nedela

Neodosielat v čase:

Hodina od:	Minúta od:	Hodina do:	Minúta do:
0	0	8	0
18	0	23	59

Export... Import... OK Apply Zrušiť Nápoveda

SMS/Email configuration

- If you enter phone number, system will generate SMS (**phone number must be in format 42190XXXXXXX without spaces or initial + sign**)
- If you enter email address, system will generate email

Configuration of filters and exceptions

Generate SMS/Email on alarms end

When selected, SMS/Email will be generated even on alarms end.

Filter for repeated alarm sending

Allows to set minimum time for which SMS/Emails won't be generated in case of repeating alarms.


Filter for day sending

Allows to define time windows in which SMS/Emails wont be generated.

Alarm configuration


Warning! Changes will be saved only when you are logged in!

On technological scheme of kotolne/ost, open context menu with right-click and select option **Point**

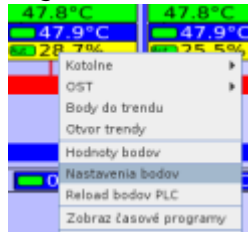

settings


Then move to option **Alarms**

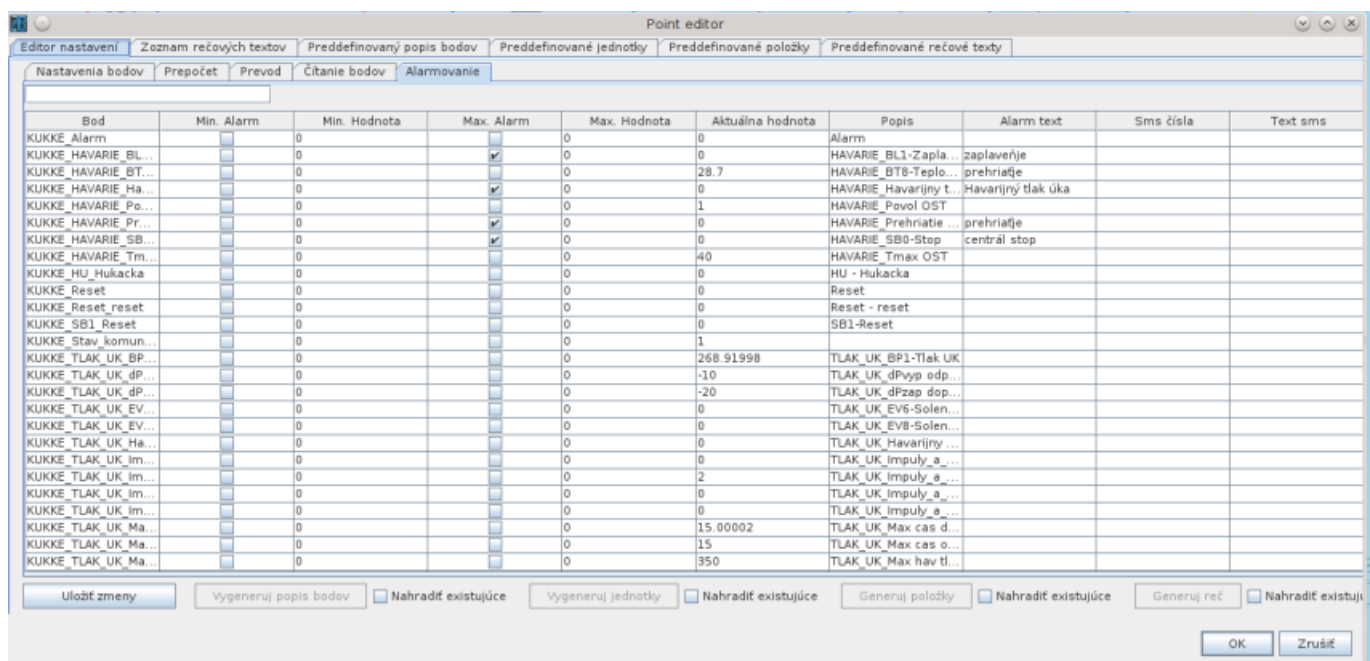

Alarms settings is common for SCADA system and Notifications

- Min. alarm will be generated, when current value is lower as defined minimal value
- Max. alarm will be generated, when current value is lower as defined maximal value

Assign user to alarm

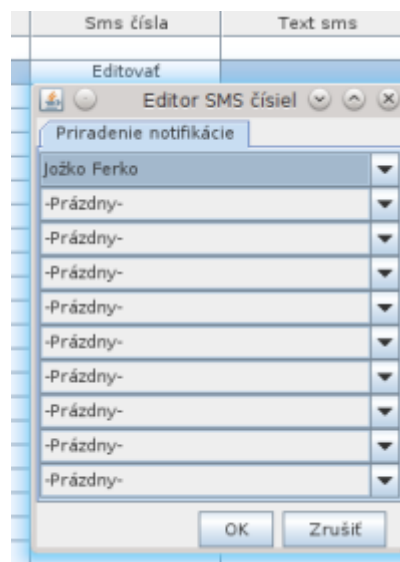

You can open User editor by clicking on option **SMS numbers**. There you can assign user to alarm.

SMS/Email text settings

In input box **SMS Text** you can define text which will be added to generated SMS/Emailu.

Configuration saving

Changes can be saved by clicking on button **Save changes**

From:
<https://wiki.apli.sk/> - Wiki

Permanent link:
<https://wiki.apli.sk/doku.php?id=en:sms>

Last update: **2018/02/23 21:29**

