SMS notification


Can send SMS or email on start or end of alarm state.

User configuration

Ná<u>s</u>troje <u>C</u> Moduly <u>O</u>ptions

In top menu **Tools** select option **Options**

In new window go to SMS tab. Warning! Changes can be saved only when you are logged in!

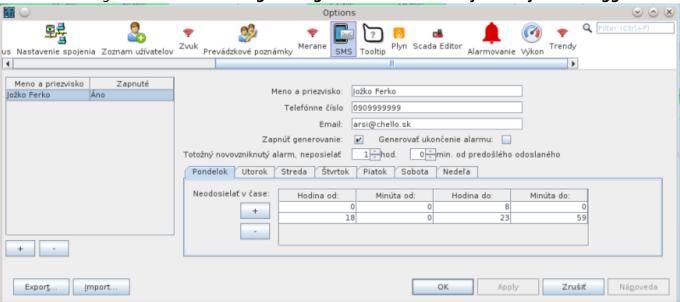

SMS/Email configuration

- If you enter phone muber, system will generate SMS (phone mumber must be in format 42190XYYYYYY without spaces or initial + sign)
- If you enter email address, system will generate email

Configuration of filters and exceptions

Generate SMS/Email on alarms end

When selected, SMS/Email will be generated even on alarms end.

Filter for repeated alarm sending

Allows to set minimum time for which SMS/Emails wont be generated in case of repeating alarms.

Filter for day sending

Allows to define time windows in which SMS/Emails wont be generated.


Alarm configuration

Warning! Changes will be saved only when you are logged in!

On technological scheme of kotolne/ost, open context menu with right-click and select option Point




Then move to option Alarms

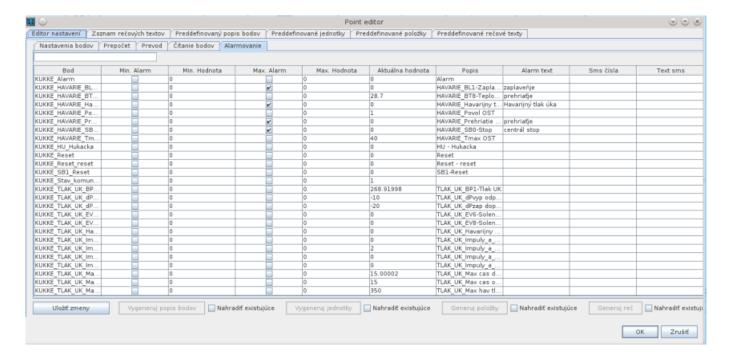

Alarms settings is common for SCADA system and Notifications

- Min. alarm will be generated, when current value is lower as defined minimal value
- Max. alarm will be generated, when current value is lower as defined maximal value

Assign user to alarm

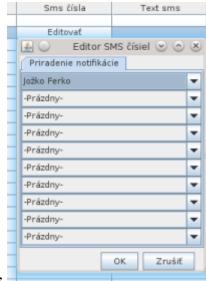

You can open User editor by clicking on option **SMS numbers**. you can assign user to alarm.

There

SMS/Email text settings

In input box **SMS Text** you can define text which will be added to generated SMS/Emailu.

Configuration saving

Changes can be saved by clicking on button Save changes