 


SMS notification

Can send SMS or email on start or end of alarm state.

User configuration

In top menu **Tools** select option **Options**



In new window go to SMS tab. **Warning! Changes can be saved only when you are logged in!**

The 'Options' window shows the 'SMS' configuration tab. It includes a table for user status, input fields for name, phone number, and email, checkboxes for alarm generation, and a section for scheduling alarms with a table for 'Neodosielať v čase:'.

Meno a priezvisko	Zapnuté
Jožko Ferko	Áno

Meno a priezvisko:

Telefónne číslo:

Email:

Zapnúť generovanie: ☒ Generovať ukončenie alarmu: ☐

Totožný novovzniknutý alarm, neposilať: hod. min. od predošlého odoslaného

Days: ☒ Pondelok ☐ Utorok ☐ Streda ☐ Štvrtok ☐ Piatok ☐ Sobota ☐ Nedela

Neodosielať v čase:		Hodina od:	Minúta od:	Hodina do:	Minúta do:
<input type="button" value="+"/>		0	0	8	0
<input type="button" value="-"/>		18	0	23	59

Buttons: Export..., Import..., OK, Apply, Zrušiť, Nápoveda

SMS/Email configuration

- If you enter phone number, system will generate SMS (**phone number must be in format 42190XXXXXXX without spaces or initial + sign**)
- If you enter email address, system will generate email

Configuration of filters and exceptions

Generate SMS/Email on alarms end

When selected, SMS/Email will be generated even on alarms end.

Filter for repeated alarm sending

Allows to set minimum time for which SMS/Emails won't be generated in case of repeating alarms.


Filter for day sending

Allows to define time windows in which SMS/Emails wont be generated.

Alarm configuration


Warning! Changes will be saved only when you are logged in!

On technological scheme of kotolne/ost, open context menu with right-click and select option **Point**

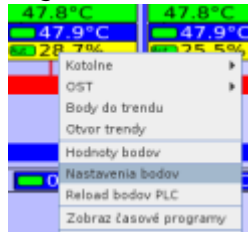

settings


Then move to option **Alarms**

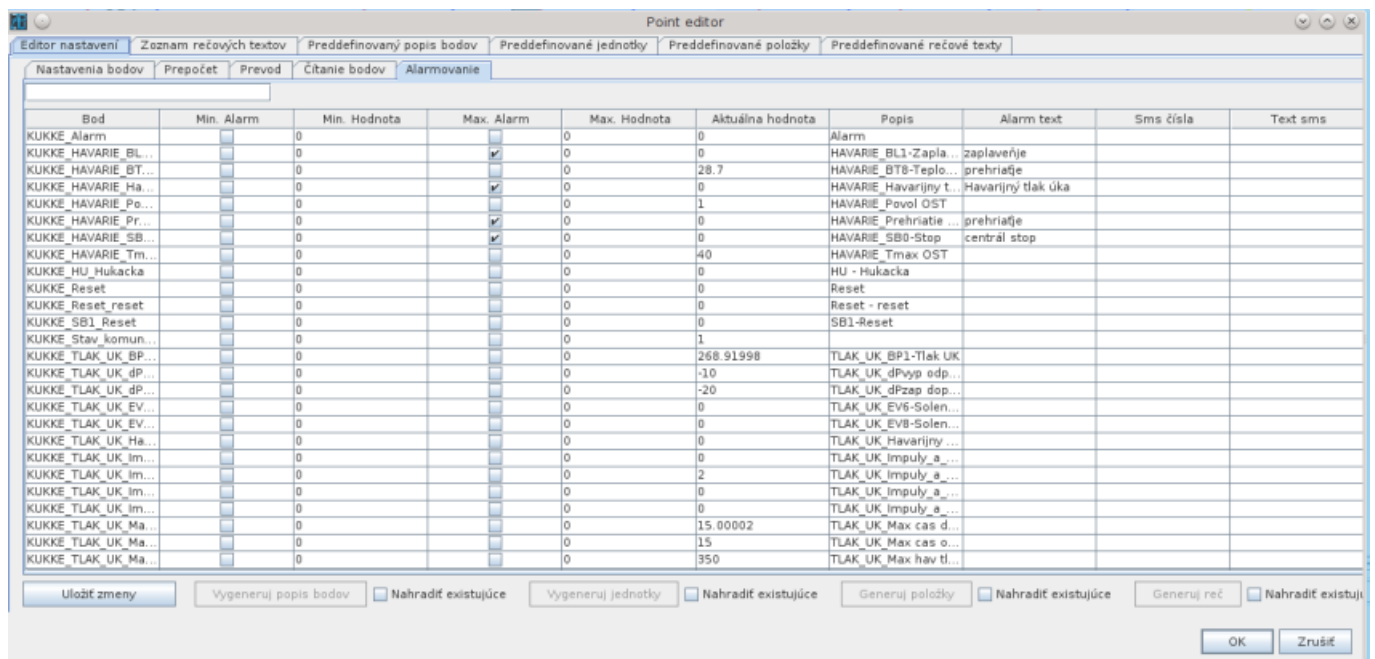

Alarms settings is common for SCADA system and Notifications

- Min. alarm will be generated, when current value is lower as defined minimal value
- Max. alarm will be generated, when current value is lower as defined maximal value

Assign user to alarm

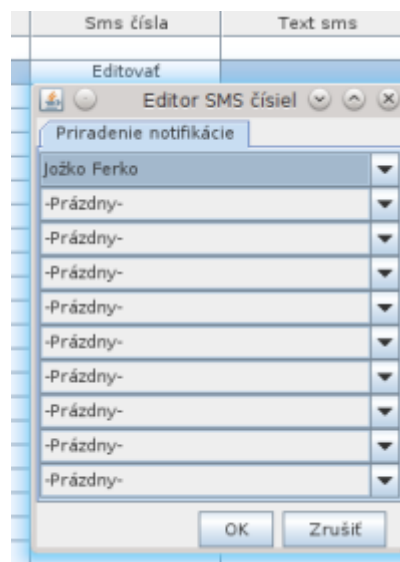

You can open User editor by clicking on option **SMS numbers**. There you can assign user to alarm.

SMS/Email text settings

In input box **SMS Text** you can define text which will be added to generated SMS/Emailu.

Configuration saving

Changes can be saved by clicking on button **Save changes**

From:
<https://wiki.apli.sk/> - Wiki

Permanent link:
<https://wiki.apli.sk/doku.php?id=en:sms&rev=1492605284>

Last update: **2018/02/23 21:29**

