

Basic settings

Converters basic settings are located in menu **System** 

Overview

Displays current state of system: 

- Average system load in last minute
- Average system load in last 5 minutes
- Average system load in last 15 minutes
- JVM Heap - used memory by application
- System memory - total used memory

Basic commands:

- Application restart
- OS restart
- Shutdown converter

Configuration of network adapter

Consists of two parts: 

- Basic settings
- Advanced settings - direct modification of configuration file



Warning! Wrong network settings can cause converter to be inaccessible. Always check your changes before saving!

Basic Settings

Allows user to define one or more IP addresses on which will be converter available.

Default Gateway.

List of DNS servers.

IP address in standard IPv4 format with prefix (xxx.xxx.xxx.xxx/nnn).

for example.: address 192.168.0.202 with netmask 255.255.255.0 will be written as

192.168.0.202/24

creates new record

deletes selected record

aves changeseverts unsaved changes Restarts network adapter
with newly saved changes

Advanced settings

Gives user total control of network settings. This option is designed for advanced linux users.
Configuration file description is available [here](#).

aves changeseverts unsaved changes

Configuration management

Provides backup and restore functions for driver configuration files.

Backup configuration

Backup manager is located in top part of the screen. Here are shown available configurations for export.

Selected configurations will be included in exported file.

elect alleselectenerate backup file

Restore configuration

Restore manager is located in bottom part of the screen.

Here will be shown configurations contained in backup file after its successful upload to server. Then it is possible to select or deselect required configurations to restore.



Application restart is required after restore.

Uploads selected backup file

Restores selected configurations

Time synchronization

Prevodník neobsahuje zálohované hodiny času, ak potrebujete aktuálny dátum a čas je potrebné použiť NTP klienta.



Ak chcete použiť pripojenie cez OpenVpn je potrebné túto časť nakonfigurovať

Obnoví záznam

Vymaže označený záznam

uloží zmeny

Vymaže

Reštartovať NTP klienta

OpenVPN

Umožňuje vytvorenie VPN pripojenia protokolom OpenVPN.

Informácie o konfigurácii nájdete [tu](#).

V ľavej časti sa nachádza editor konfiguračného súboru a tlačidlá, ktoré umožňujú upload kľúčov.

V pravej časti sa nachádzajú tlačidlá ovádzania služby a log súbor.



OpenVPN overuje certifikáty podľa systémového času, preto je potrebné mať správne nastavenú Synchronizáciu času.



Nahraný súbor s kľúčom je pri ukladaní premenovaný podľa názvu tlačidla.

aves changes

Reverts all unsaved
changes

loads ca.crt

oads client.crt

loads client.key

loads ta.key

ables service autostart

isables service autostart

arts service

tops service

System updates

Ak je prevodník pripojený k internetu, je možné vykonať jeho aktualizáciu cez internet, alebo je možná manuálna aktualizácia.

Ak je dostupná aktualizácia operačného systému, budete vyzvaný na jej inštaláciu.
Následne môžte pokračovať aktualizáciou modulov.

Denník operačného systému

Tu sa zobrazuje aktuálny denník operačného systému.

Permanentný odkaz:

<https://wiki.apli.sk/doku.php?id=en:blacky-system&rev=1491307614>

