 


# SMS notification

Can send SMS or email on start or end of alarm state.

## User configuration

In top menu **Tools** select option **Options**



In new window go to SMS tab. **Warning! Changes can be saved only when you are logged in!**

The 'Options' window displays the 'SMS' configuration tab. It includes a table for user status, input fields for personal information, checkboxes for alarm generation settings, and a table for defining time filters for alarm notifications.

Meno a priezvisko	Zapnuté
Jožko Ferko	Áno

Meno a priezvisko:   
 Telefónne číslo:   
 Email:   
 Zapnúť generovanie: ☒ Generovať ukončenie alarmu: ☐  
 Totožný novovzniknutý alarm, neposielat:  hod.  min. od predošlého odoslaného

Days: ☒ Pondelok ☐ Utorok ☐ Streda ☐ Štvrtok ☐ Piatok ☐ Sobota ☐ Nedela

Neodosielat v čase:		Hodina od:	Minúta od:	Hodina do:	Minúta do:
<input type="button" value="+"/>		0	0	8	0
<input type="button" value="-"/>		18	0	23	59

Buttons: Export..., Import..., OK, Apply, Zrušiť, Nápoveda

## SMS/Email configuration

- If you enter phone number, system will generate SMS (**phone number must be in format 42190XXXXXXX without spaces or initial + sign**)
- If you enter email address, system will generate email

## Configuration of filters and exceptions

### Generate SMS/Email on alarms end

When selected, SMS/Email will be generated even on alarms end.

### Filter for repeated alarm sending

Allows to set minimum time for which SMS/Emails won't be generated in case of repeating alarms.


## Filter for day sending

Allows to define time windows in which SMS/Emails wont be generated.

## Alarm configuration

**Warning! Changes will be saved only when you are logged in!**

On technological scheme of kotolne/ost, open context menu with right-click and select option **Point**

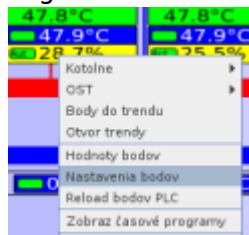


settings

Then move to option **Alarms**

## Alarms settings is common for SCADA system and Notifications

- Min. alarm will be generated, when current value is lower as defined minimal value
- Max. alarm will be generated, when current value is lower as defined maximal value

## Assign user to alarm

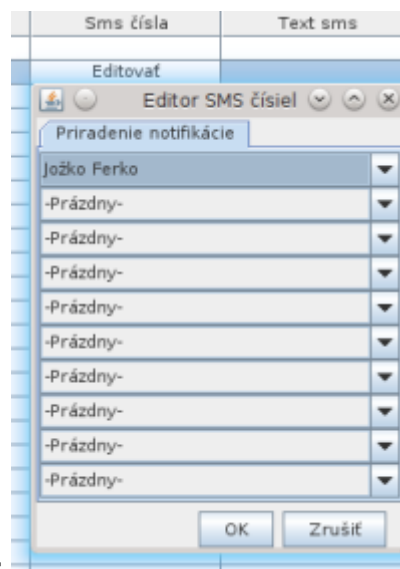

You can open User editor by clicking on option **SMS numbers**. There you can assign user to alarm.

### SMS/Email text settings

In input box **SMS Text** you can define text which will be added to generated SMS/Emailu.

### Configuration saving

Changes can be saved by clicking on button **Save changes**

From:  
<https://wiki.apli.sk/> - Wiki

Permanent link:  
<https://wiki.apli.sk/doku.php?id=en:sms>

Last update: **2018/02/23 21:29**

