 


SMS notification


Can send SMS or email on start or end of alarm state.

User configuration

In top menu **Tools** select option **Options**



In new window go to SMS tab. **Warning! Changes can be saved only when you are logged in!**

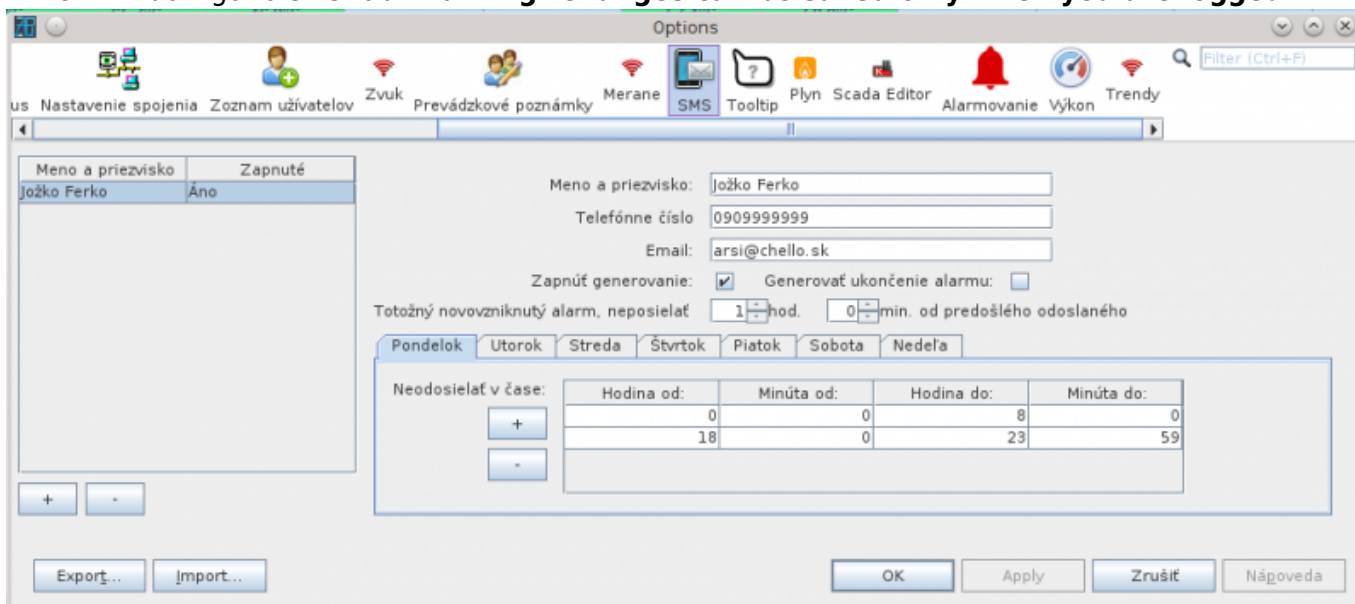

SMS/Email configuration

- If you enter phone number, system will generate SMS (**phone number must be in format 42190XXXXXX without spaces or initial + sign**)
- If you enter email address, system will generate email

Configuration of filters and exceptions

Generate SMS/Email on alarms end

When selected, SMS/Email will be generated even on alarms end.

Filter for repeated alarm sending

Allows to set minimum time for which SMS/Emails won't be generated in case of repeating alarms.


Filter for day sending

Allows to define time windows in which SMS/Emails wont be generated.

Alarm configuration


Warning! Changes will be saved only when you are logged in!

On technological scheme of kotolne/ost, open context menu with right-click and select option **Point**

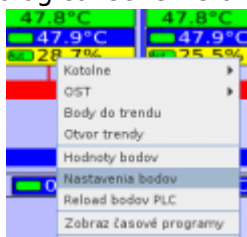

settings


Then move to option **Alarms**

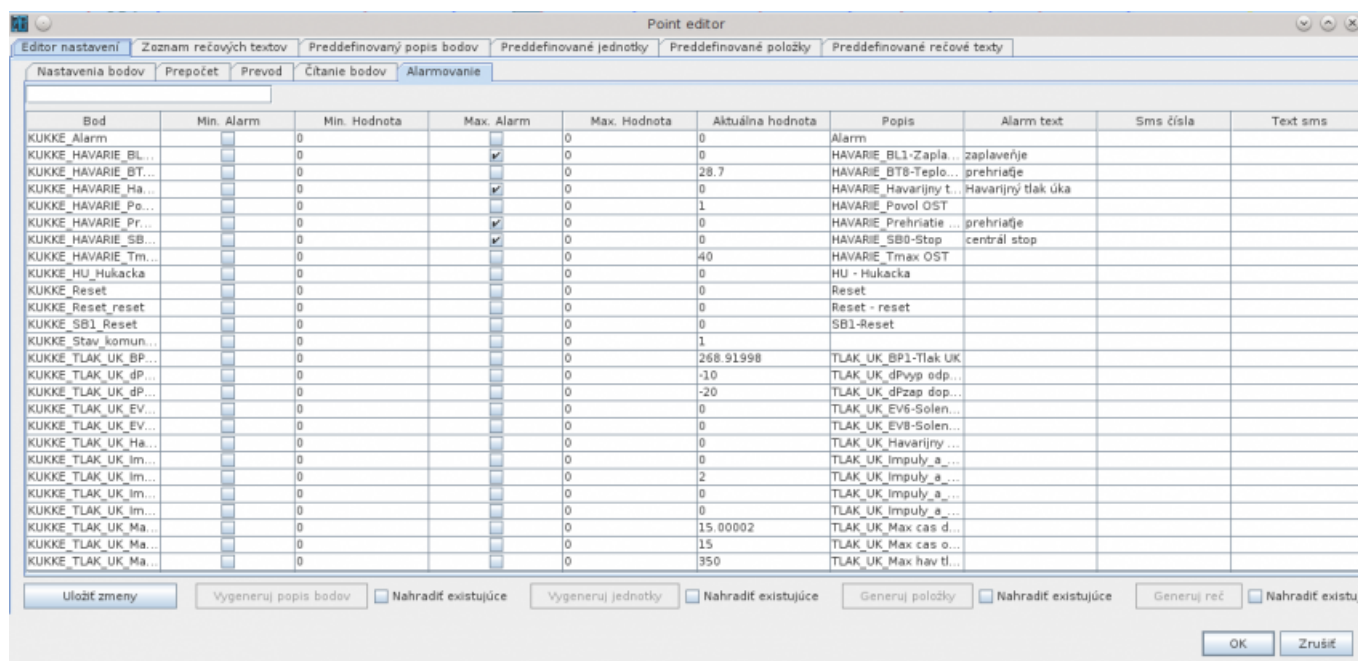

Alarms settings is common for SCADA system and Notifications

- Min. alarm will be generated, when current value is lower as defined minimal value
- Max. alarm will be generated, when current value is lower as defined maximal value

Assign user to alarm

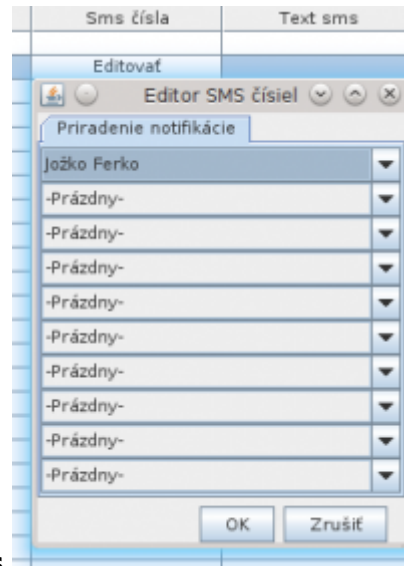

You can open User editor by clicking on option **SMS numbers**. There you can assign user to alarm.

SMS/Email text settings

In input box **SMS Text** you can define text which will be added to generated SMS/Emailu.

Configuration saving

Changes can be saved by clicking on button **Save changes**