

SMS notification

Can send SMS or email on start or end of alarm state.

User configuration

In top menu **Tools** select option **Options** 

In new window go to SMS tab. **Warning! Changes can be saved only when you are logged in!**



SMS/Email configuration

- If you enter phone number, system will generate SMS (**phone number must be in format 42190XXXXXX without spaces or initial + sign**)
- If you enter email address, system will generate email

Configuration of filters and exceptions

Generate SMS/Email on alarms end

When selected, SMS/Email will be generated even on alarms end.

Filter for repeated alarm sending


Allows to set minimum time for which SMS/Emails won't be generated in case of repeating alarms.

Filter for day sending

Allows to define time windows in which SMS/Emails won't be generated.

Alarm configuration

Warning! Changes will be saved only when you are logged in!

On technological scheme of kotolne/ost, open context menu with right-click and move cursor to option **Point settings** .

Then move to option **Alarms**



Alarms settings is common for SCADA system and Notifications

- Min. alarm will be generated, when current value is lower as defined minimal value
- Max. alarm will be generated, when current value is lower as defined maximal value

Assign user to alarm

You can open User editor by clicking on option **SMS numbers**. There you can assign user to alarm.

SMS/Email text settings

In input box **SMS Text** you can define text which will be added to generated SMS/Emailu.

Configuration saving

Changes can be saved by clicking on button **Save changes**

Permanentný odkaz:

<https://wiki.apli.sk/doku.php?id=en:sms&rev=1492604711>

