

Excel C-bus

Description

Supported PLC:

- XL50
 - XL80
 - XL100
 - XL500
 - XL600
 - XL800 / Lion
 - Q7750A Zone Manager
-

Time Programs

Time schedules C-bus have a different structure as a BACnet / IP.

The program consists of so-called. daily programs, their number is not limited and include records at the time hh: mm set value.

Subsequently, to every day of the week assigns the daily program.

The converter converts the structure compatible with Bacnet and the first store to Excel will create daily programs Bacnet1 ... Bacnet7 and they are assigned each day. Time programs are updated once an hour, or you can export the BACnet BV entry point into it and run the update program from the attached Excel.

implementation Bacnet

Excel	Bacnet
Analog Input	AnalogInput
Analog Output	AnalogOutput
Pseudo Analog	AnalogValue
Digital Input	BinaryInput
Digital Output	BinaryOutput
Pseudo Digital	BinaryValue
CounterInput	AnalogValue
Pseudo Counter	AnalogValue
XRegister	AnalogValue
YRegister	AnalogValue
FlexiblePoint	AnalogValue
Universal	AnalogValue

Properties:

- `objectName`
- `objectType`
- `presentValue`
- `statusFlags`
- `outOfService`
- `covIncrement`
- `priorityArray`
- `relinquishDefault`



If is the point in manual mode indicates this property `outOfService`.



When exporting name of points to Bacnet all characters except "
0123456789abcdefghijklmnopqrstuvwxyzABCDEFGHIJKLMNOPQRSTUVWXYZ -_! ~% & @ # \$% ^
'Discarded.

Protocol Implementation

supported data rates:

- 4800
- 9600
- 19200
- 38400
- 76800


Driver when you start, examine the PLC connected to the c-buse and download a list of their points and time programs. This list remains active even after you disconnect the transmitter from the line to restart the controller / transmitter. The loss of connection to the PLC / C-bus, the points are Bacnet fault flag set.

The driver can operate the sequential read mode or a COV Protocol.

When COV protocol is activated PLC transmit measurement values only when changing their values. When the power fails on connected PLC may take a few minutes to re-sign COV assignment from the PLC.

Change Log for the specific item activated in the configuration file `xlxs`.

Wiring Diagram

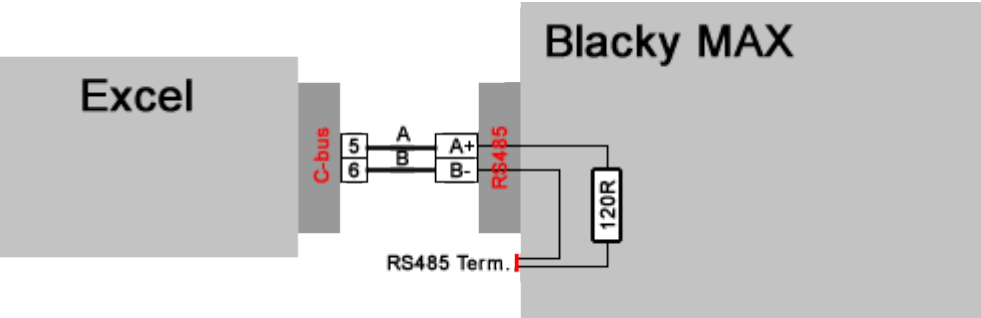

Involvement

Configuration

Drivers settings

Bacnet IP settings

Bacnet BBMD

B-Port settings

C-Bus settings

M-Bus settings

C-bus COM port:

USB0 [/dev/ttyUSB0]

C-bus baud rate:

76800

C-bus address:

30

C-bus Blacklist

Run driver on start

Yes

Number of paralel point reads:

3

Permit time change through Bacnet

Yes

Export Excel C-Bus time to Bacnet points

Yes

Timepoint name: [@ C-bus address][# Excel name]

cbus_dateTime_@_#

Export Bacnet connection state

Yes

State point name

cbus_excel_status

Enable Time program reading

Yes

Permit Time programs write through Bacnet

Yes

Export Time program reading point:

Yes

Time program reading point name

cbus_tp_refresh

C-bus COM port:

The selection of the communication port for the C-bus.

Data Rate C-bus:

Baud rate communication port

Address C-bus:

C-bus address converter

The number of parallel read by points:

Parallel reading points accelerates the read points, the value should be between 1-5

Allow change the time Excel BACnet:

Export time C-bus Excel to point to bacnete:

Name of the point in time:

These options allow you to export date and time of all connected Excel to BACnet analog value points. The value can be re-calculated as [long timeMs 1000000 * = value] is the time in ms from midnight UTC 1.1.1970. Name the point @ is replaced CBUS address and # is replaced with the name Excel.

Export connection status on Bacnet:**Name status item:**

Exports AnalogValue point where the current connection status.

0 - Disconnected

1 - Initialization

2 - The connection is OK

Enable reading time programs:**Allow time writing programs BACnet:****Export point reading time programs:****Name of point of reading time programs**

Controls reading and writing time programs. Time programs from Excel updated once an hour, or can be exported to Bacnet BinaryValue point. Registration of any value to that point will start updating time programs.

Summary of connection status

C-bus

It displays the current status of the driver.


The nice part is an overview of connected devices:

Driver state
Point configuration

0	1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24	25
26	27	28	29	30								

Driver state	Stop
Received data packets	124739
Sent data packets	82859
CRC error count	0
Points Reading Duration	18s
point reads per second	10
Total count	40815
Read errors count	7
Last error:	<div style="border: 1px solid #ccc; padding: 2px 10px; display: inline-block;">↺</div>

- **green** - device is active
- **orange** - address of Blacky Max
- **gray** - no device
- **blue** - the device was attached after discovery of points



Restart driver

Configuration reading points

C-bus

Driver state

Point configuration

Download saved point configuration

Download current point configuration

Delete saved point configuration

Add point configuration

Browse...

No file selected.

Upload

The converter allows you to export the current list of items on the Excel file xlxs. The exported file includes for each attached excel one tab with a list of points. Point can rename the file and set the priority of reading.

bport.xlsx - LibreOffice Calc

	A	B	C	D	E
1	Point address	Point type	Original point name	User point name	Read priority
2	0	AnalogInput	A1#T_Vonkajsia	A1#T_Vonkajsia	1
3	1	AnalogInput	A1#Twk1Vstup	A1#Twk1Vstup	1
4	2	AnalogInput	A1#Twk1Vystup	A1#Twk1Vystup	1
5	3	AnalogInput	A1#Twk2RkVstup	A1#Twk2RkVstup	1
6	4	AnalogInput	A1#Twk2RkVystup	A1#Twk2RkVystup	1
7	5	AnalogInput	A1#Twk2Vstup	A1#Twk2Vstup	1
8	6	AnalogInput	A1#Twk2Vystup	A1#Twk2Vystup	1
9	7	AnalogInput	A1#Twk3Vstup	A1#Twk3Vstup	1
10	8	AnalogInput	A1#Twk3Vystup	A1#Twk3Vystup	1
11	9	AnalogInput	A1#TwRozdelovac	A1#TwRozdelovac	1
12	10	AnalogInput	A1#TwZberac	A1#TwZberac	1
13	11	AnalogInput	A1#TwZberacMT	A1#TwZberacMT	1
14	0	AnalogOutput	A1#~_K1Ventil	A1#~_K1Ventil	1
15	1	AnalogOutput	A1#~_K2Ventil	A1#~_K2Ventil	1
16	2	AnalogOutput	A1#~_K3Ventil	A1#~_K3Ventil	1

. You can change the column **D** under this name will then export the item to Bacnet.
Column **E** priority reading. If Prority zero point is not exported to Bacnet and off his reading. If the value is greater than zero, at every reading point, the value is reduced by one if the resulting value of zero starts his reading and the value is set to the original value of xlxs file.
8) Value **255** turns reading the value of a rolling point protocol
Columns F..XXX you can use for your comment ..

From:

<https://wiki.apli.sk/> - Wiki

Permanent link:

<https://wiki.apli.sk/doku.php?id=en:blacky-cbus&rev=1493827123>

Last update: **2018/02/23 21:29**

